CALPHA ANTENNA®

SWR Sounder

Description

Use the HF SWR Sounder to add functionality to Antenna Analyzers or SWR Meters, especially useful if you have a disability such as being sight impaired. Simply by placing the HF SWR Sounder near any magnetic loop antenna and listen for the loudest beep as you tune for the lowest SWR using CW or FM mode.

Instructions

- 1. Place near MagLoop in the direction indicated on the label under the SWR Sounder.
- 2. Tune for loudest beep using 5W minimum on FM or CW mode.
 - a. NOTE More power makes a louder beep. No more than 20W should be needed.

Deployment



Support

Please feel free to email us at alphaantenna@gmail.com if you have any questions.