

---


## Model – 100W Alpha Loop

Operating Manual, Version 6.3, May 22, 2020

---

### Operation

The model 100W Alpha Loop is a 10-40 Meter transmit/receive antenna, which handles 25 Watts Digital, 50 Watts CW, and 100 Watts PEP SSB.

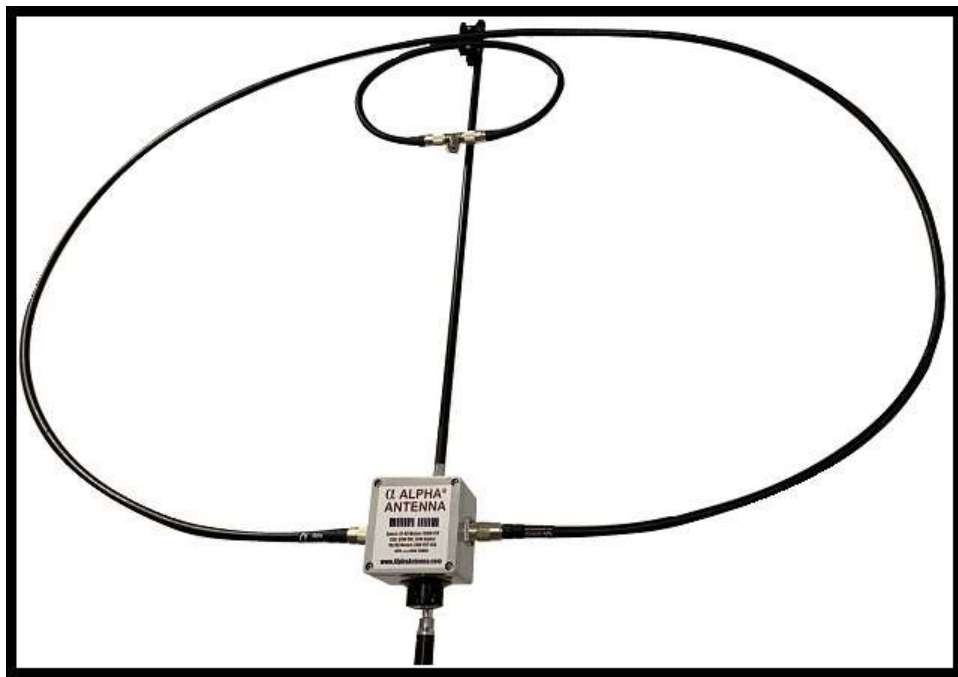

### Excess RF Exposure Warning

In the United States, the Federal Communications Commission has established guidelines for human exposure to Radio Frequency (RF) electromagnetic fields no matter what the antenna type. The commission's requirements are detailed in parts 1 & 2 of the FCC's rules and regulations {47 CFR, 1.1307(b), 1.1310, 22.1091, 2.1093}. It is the responsibility of the owner/operator of this device to follow all applicable warnings and precautions regarding human exposure to RF fields. Additional interference with other electrical devices can occur. Additional reference: <http://www.arrl.org/rf-exposure>

### Support Contacts

If you have questions about your antenna, please feel free to contact us.

Email: [support@alphaantenna.com](mailto:support@alphaantenna.com) - Phone: 1-888-482-3249

WEB: [www.alphaantenna.com](http://www.alphaantenna.com)

For **Hints & Kinks** and **F.A.Q.s**, go to [www.AlphaAntenna.com](http://www.AlphaAntenna.com) and select the menu 'Community & Support'.

# $\alpha$ ALPHA ANTENNA®

## Assembly

Screw the tripod onto the bottom of the grey Alpha Match.



Screw the center mast pole onto the top of the grey Alpha Match box.


Install the rubber grommet over the pole.



Locate the two coax mounting clips. One has two slots and the other has one slot: Slide the clips onto the top of the center mast pole.


Locate the **large Coaxial Outer Loop**: Center and insert the large Coaxial Outer Loop snugly into the top slot of the coax mount clip with the two openings.

Locate the **small Coaxial feed Loop**: Insert the small Coaxial feed Loop snugly into the bottom slot of the clip with the two openings.

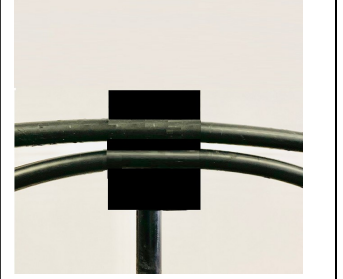


**Attach the PL259 connectors on the outer Coaxial loop to the grey box:** Attach the PL-259 connectors on the outer Coaxial Loop to the SO-239 connectors on the grey Alpha Match box. The loop should form an oval, which will match the shape of the inner loop.

**Optional 40-80M Booster Cable:** The Booster cable enables 20W PEP SSB on 40/60/80M. It installs in Series with the original 10-40M outer loop using the barrel connector to form a double loop. The original 10-40M loop is placed into the top slot of the clip with 2 openings, while the 40/80M booster cable is placed into the bottom slot of the same clip.

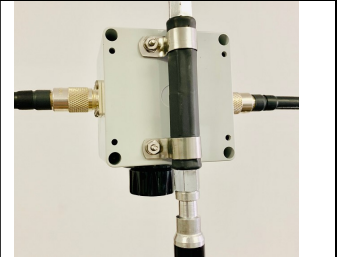

**Attach your coax:** Connect your PL259 to the T-Connector on the small inner loop, and then run your coax to your equipment. (NOTE – There is an extra T-Connector included).

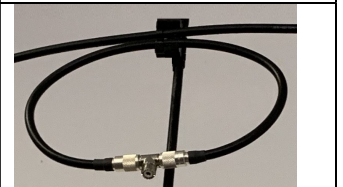

**Tuning:** Start with **MINIMUM** power & select your frequency, then turn the black knob on the grey Alpha Match till your rig's meter peaks with the loudest audible noise floor. Second, watch your SWR meter to dip follow the next step to 'Fine Tune' if you so desire. NOTE 1 – There is a 30% friction clutch where the knob would normally have a hard stop. This enables the knob to keep turning without causing damage to the gears or variable air capacitor. NOTE 2 – It takes about 3 full turns of the black knob to fully cycle the variable air capacitor.

**Optional Tuning:** The inner loop can be moved to the clip with 1 opening, where a lower SWR might be achievable by sliding the Inner loop up or down the center support mast.

**$\alpha$  ALPHA ANTENNA®**